

CONTENTS

1. (6) #8 x 3/4" flat head Philips screws
2. (1) SanitGrasp® model #SG-101
3. (1) 3/8"-16 x 2-1/2 bolt
4. (1) SanitGrasp® instructional sticker 4" x 9"

SanitGrasp® DIMENSIONS

1. 4" x 16"
2. The furthest point from the handle is 4" from the door




NEW INSTALLATION (Images are not to scale)

1. Mark bolt hole (Figure A)
 - 2 3/4" from edge of door
 - 44 1/4" from bottom of the door
2. Use a 3/8" bit for bolt hole and countersink the hole so the bolt head is flush
3. Attach bolt (#3) thru the door to the SanitGrasp® plate (#2)

4. Use a level to assure final plate placement
5. Mark holes on door thru SanitGrasp® plate
6. Use a 3/32" bit for a pilot hole
7. Attach plate with the include screws (#1)
8. Use a faceplate on the opposite side of the door to cover the bolt head
9. Place instructional sticker on door directly above the SanitGrasp® door handle

Figure A—Top of Door

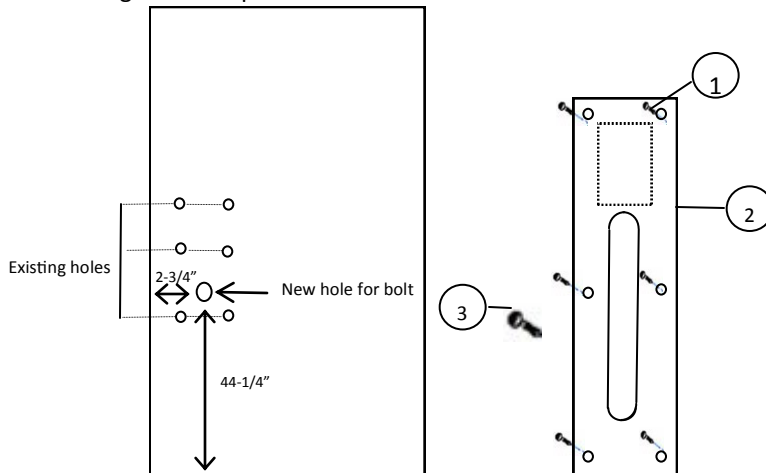

DOOR STOP

It is recommended to utilize a door stop (wall or floor) to prevent unnecessary wear and tear on the SanitGrasp® and/or the wall.

REPLACING AN EXISGTING "PULL" HANDLE

Verify the SanitGrasp® plate holes align with the existing holes, form the previous plate. If they do not follow the NEW INSTALLATION instructions.

1. Use a 3/8" bit for center bolt hole through door and countersink the hole so the bolt head is flush
2. Attach bolt (#3) thru the door to the SanitGrasp®

- plate (#2)
3. Use a level to assure final plate placement
4. Mark holes on door thru SanitGrasp®
5. Use a 3/32" bit for a pilot hole
6. Attach plate with the included screws (#1)
7. Use a faceplate on the opposite side of the door to cover the bolt head